



A Better Way
INNOVATIONS, LLC

IPHONE/ANDROID PORTAL LINK & ALERT SETUP

To ensure that you receive your Shop-Sentry & Home-Sentry Alerts in the fastest, most convenient manner, please see the below instructions to add links to our portal from your Home Page and set your Phone Call Alerts to ring 24-Hours Per Day---so you don't miss important messages!

HOME PAGE DIRECT LINK TO PORTAL

IPHONES:

Step 1:

Open Safari.

Type in our portal address:

<https://portal.abw-innovations.com>

Push INSTALL APP.

Follow Instructions shown in app.

Use Password saver to ease use.



Continued,,,,

Step 2:

Add your log in name here (not the abwsent) and enter your password. Also check “remember me”.

You may also select to add this entry to your **PASSWORDS** section in your Iphone—so you do not need enter this data each time.

Touch Log In.

8:05

ABW A Better Way INNOVATIONS, LLC

LOG IN CREATE ACCOUNT

abwsent

.....

☐ Remember Me Forgot?

Login

English (US) v4.1.2.1

AA bw-innovations.com

Step 5:

You should now be on the Opening/Home page of your account in the Shop-Sentry or Home-Sentry Portal.

Use the Drop-Down Menu to proceed within the Portal.

NOW YOU CAN ACCESS OUR PORTAL BY SIMPLY TOUCHING THE ABW “ICON”. CONTINUE TO FOLLOWING PAGES TO SET UP YOUR PHONE CALLS TO “RING THROUGH” 24 HOURS PER DAY—DON’T MISS CALLS AT NIGHT!

8:05

ABW A Better Way INNOVATIONS, LLC

Sensors

Active Alerting Offline Warning

Gateways

Active Warning Offline

Recent Reports

- NOTIFICATION CREDITS Last Ran: 10/22/2023
- Client List Last Ran: 7/24/2023
- ACCOUNT LIST Last Ran: 7/24/2023
- SENSOR LIST Last Ran: 7/11/2023
- DAILY ALERTS-AM Last Ran: 6/27/2023

AA bw-innovations.com

PHONE CALL SET UP TO INSURE “RING THROUGH” 24 HOURS PER DAY

Step 1:

Look in your phone calls “recent” section, find the phone call from your last ABW phone call—alerting you to an alert and add it as a “contact”.

Insert a name for this phone call number. Here we have used ABW ALERT NOTICE. You can use any name you want.


If you cannot find a recent phone call from ABW—you can use 385-245-2815, however, you may receive a different number in your area. If a different number is received, you will need to update or add that number to this contact record.



Step 2:

Select “edit” and go to the ringtones below.

Touch the “ringtone” area so you can make choices.

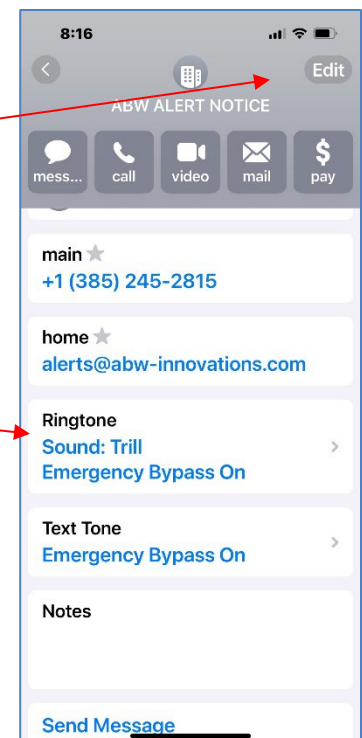


Continued,,,,

Step 3:

Select-turn on “Emergency Bypass”.

Select the Tone you would like to hear when you receive a call from the ABW Alert system. Many people select an “alarm or alert” type sound—so it stands out.

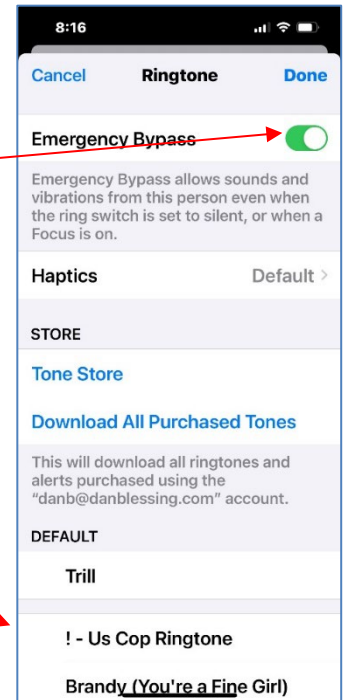


Step 4:

Repeat the above steps for Text Tones also by going back to the main contact page, “edit” and select Text Tone.

Select-turn on “Emergency Bypass”.

Select the Tone you would like to hear when you receive a text from the ABW Alert system. Many people select an “alarm or alert” type sound—so it stands out.

YOU SHOULD BE ALL SET! PLEASE CALL WITH ANY QUESTIONS OR PROBLEMS.

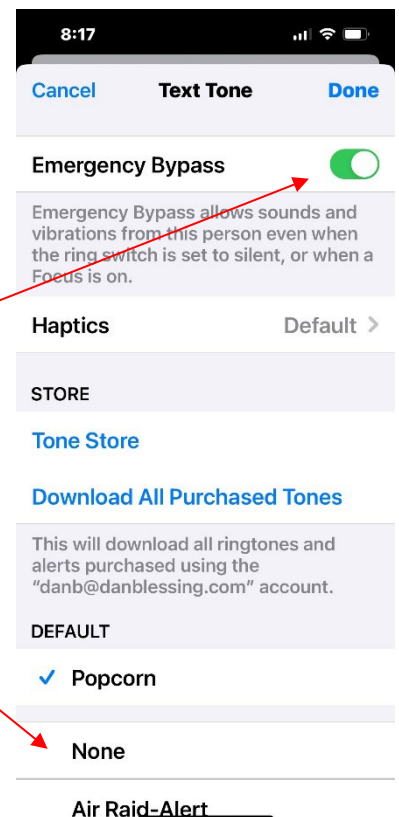

ANDROIDS:

*Please note—there are many versions of Android Operating Systems, depending upon which your phone uses. Variations or these instructions may or may not apply.

HOME PAGE DIRECT LINK TO PORTAL

Step 1:


Open Browser.

Type in our portal address:

<https://portal.abw-innovations.com>

Step 2:

Select INSTALL APP. Follow instructions in app.

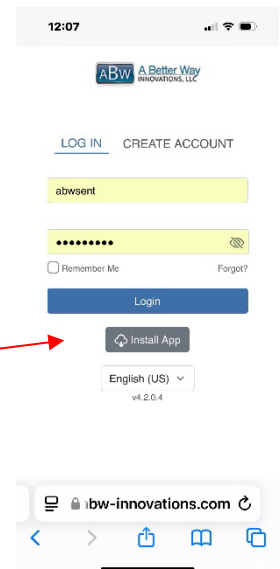

Continued on NEXT PAGE,,,

PHONE CALL SET UP TO INSURE “RING THROUGH” 24 HOURS PER DAY


Step 1:

Look in your phone calls “recent” section, find the phone a call from your last ABW phone call—alerting you to an alert and add it as a “contact”. Insert a name for this phone call number. Here we have used ABW ALERT NOTICE. You can use any name you want.

If you cannot find a recent phone call from ABW—you can use 385-245-2815, however, you may receive a different number in your area. If a different number is received, you will need to update or add that number to this contact record. Then,

Go to “Settings”.


Select “Notifications”

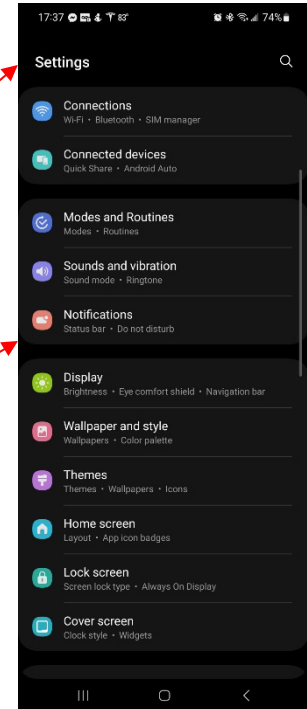

Step 2:

Select “Do Not Disturb”.


Set up your desired “Do not Disturb” parameters as you desire.

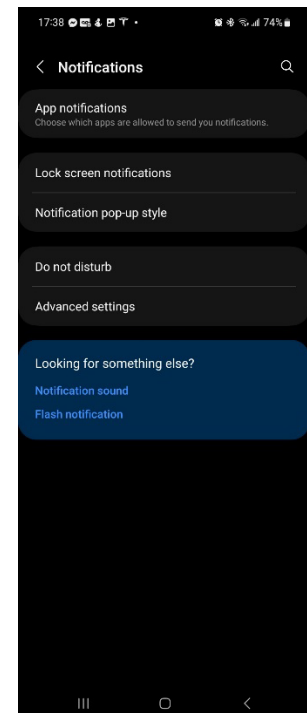

Continued,,,,

Step 3:

Select “Calls & Messages”.

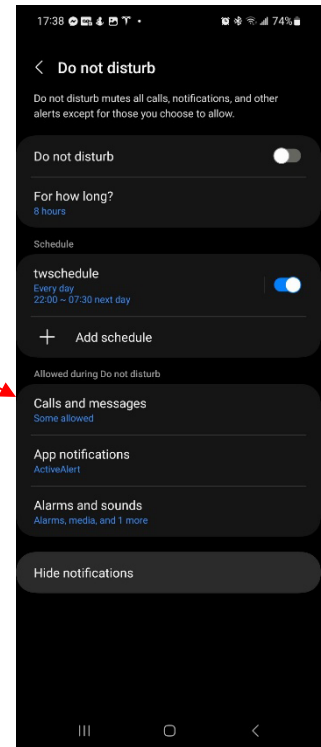


Step 4:

Select “All during Do Not Disturb”.

Select “Add Contact”.

Then add the ABW contact you made earlier.

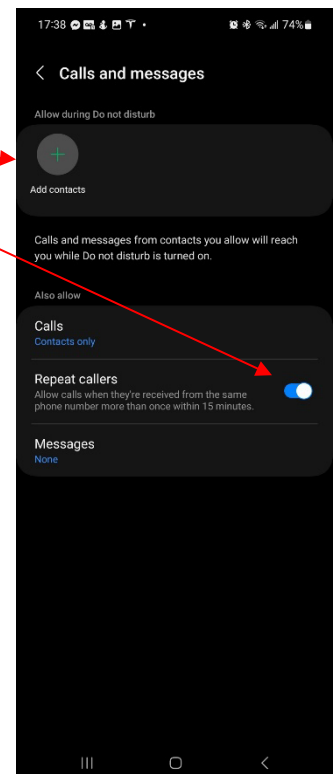

You should be all set!

Call us with any questions!